




Rim


NÁVOD K POUŽITÍ
BEDIENUNGSANLEITUNG
OPERATING INSTRUCTIONS
MODE D'EMPLOI
INSTRUKCJA UŻYTKOWANIA
HASZNÁLATI ÚTMUTATÓ


FUTURA FU 3121



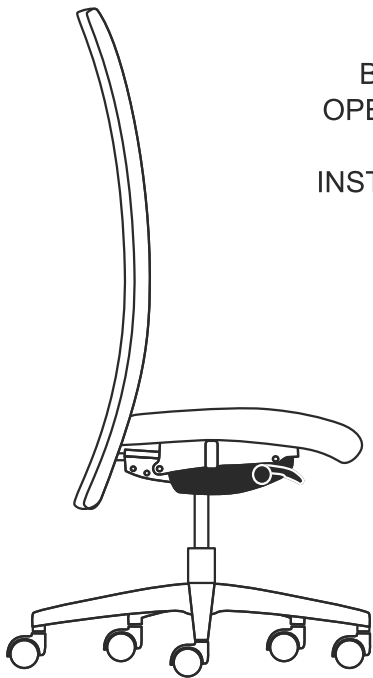


ST4

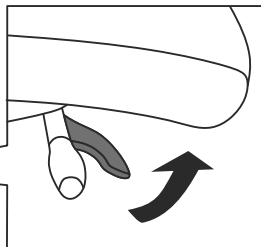
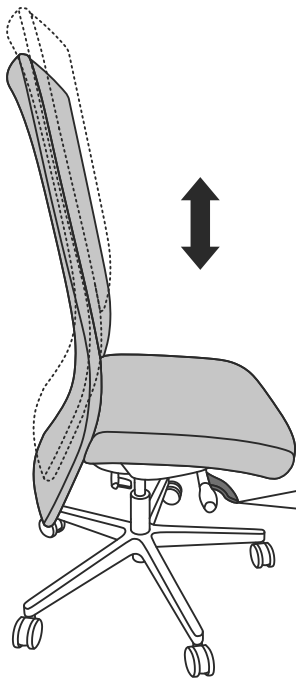



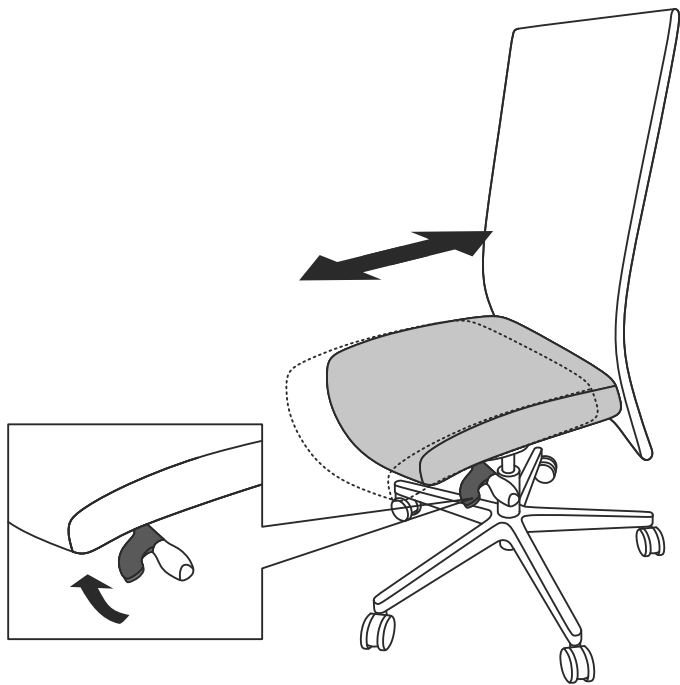


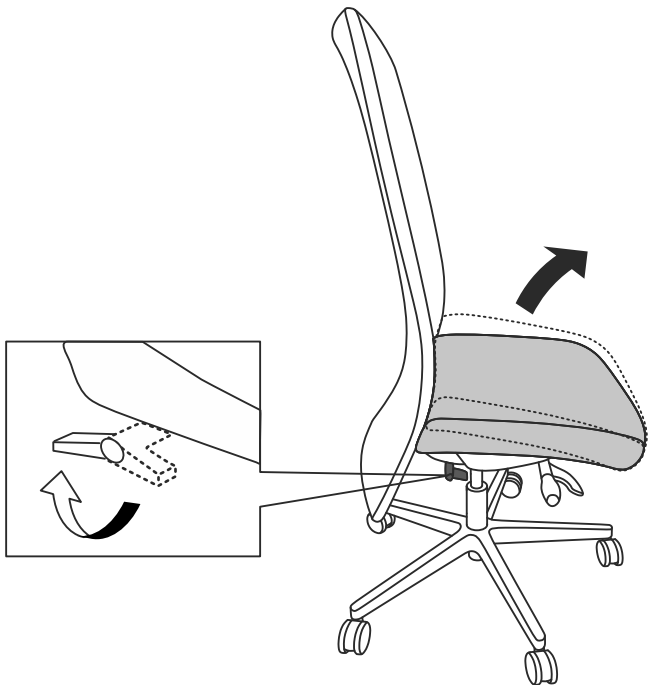

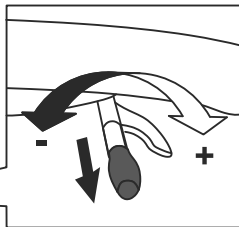
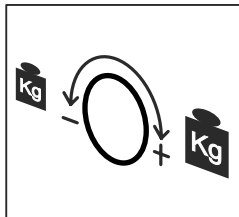
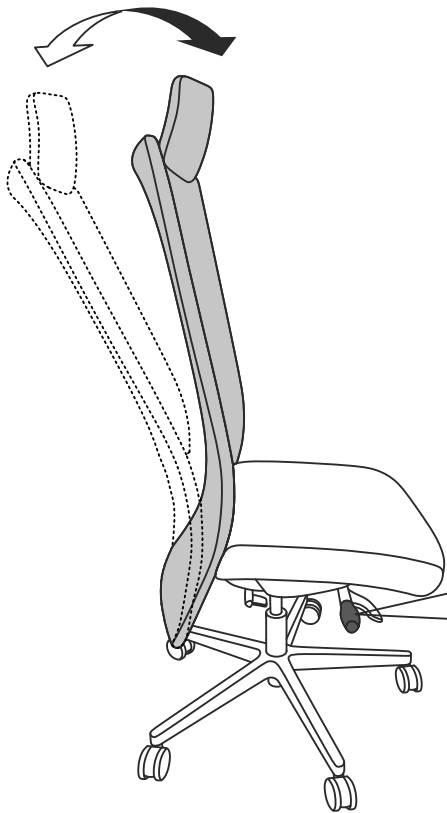


STOP!
STOP!


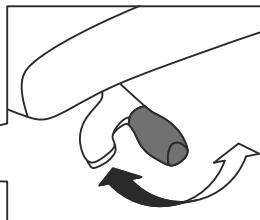
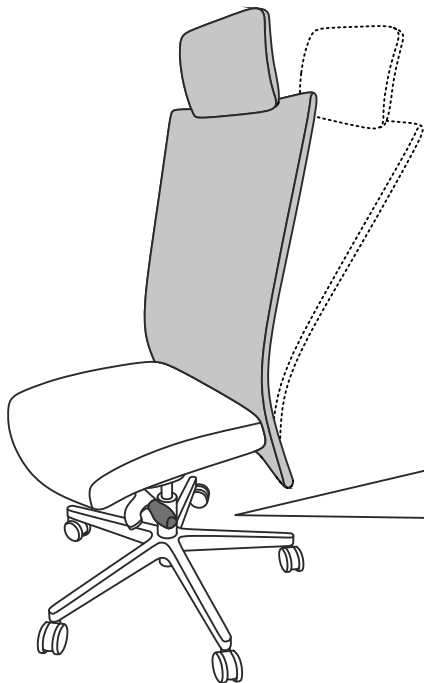


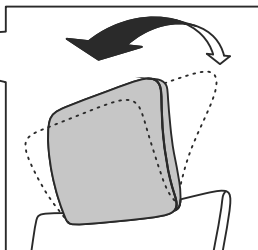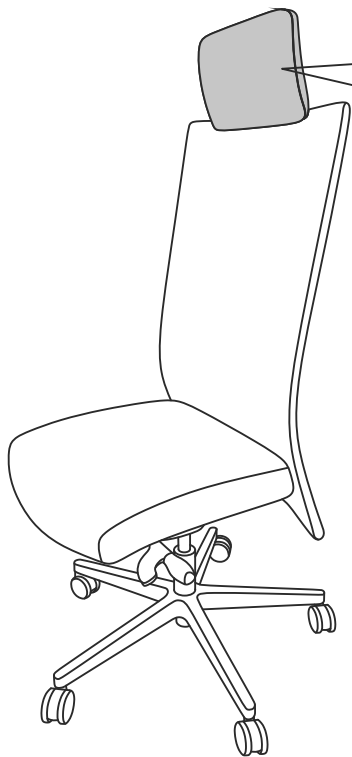

086 3F

 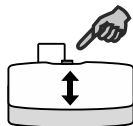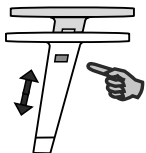

088 3F

 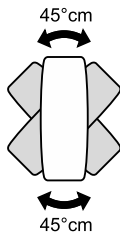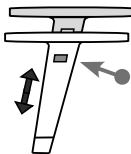

Rim

RIM CZ a.s.

Dr. E. Beneše 1015

765 02 Otrokovice

CZECH REPUBLIC

Tel.: +420 577 112 640

E-mail: info@rim.cz

www.rim.cz

